

This **Quick Start** instruction sheet is designed to cover the most commonly utilized features of the IA4100.

PROGRAMMING

1. PROGRAMMING A PHONE NUMBER TO DIAL

Call the extension or phone number of CB unit, after the RFA tone:

12583#	programming mode
99*99#	defaults the phone
57#	trains the phone on the local loop
01 <phone number> #	1st phone number, button #1 dials
02 <phone number> #	2nd phone number, button #1 dials
03 <phone number> #	3rd phone number, button #1 dials
04 <phone number> #	1st phone number, button #2 dials
05 <phone number> #	2nd phone number, button #2 dials
06 <phone number> #	3rd phone number, button #2 dials
*#	hang up and exit programming

If messages are required see section 3.

NOTE: On a dial up or POTS line you must program one number in memory slot 01 for a FP1 faceplate and one number in 01 and 04 for a FP2 faceplate. **Failure to program in any number will result in a failure to operate.**

2. PROGRAMMING FOR HOT LINE (RING-DOWN)

Call the extension or phone number of CB Unit, after the RFA tone:

12583#	programming mode
99*99#	defaults phone
57#	trains the phone on the local loop
5000#	give up waiting for dial tone
*#	hang up and exit programming

If messages are required see section 3.

3. RECORDING MESSAGES

Call the extension or phone number of CB Unit, after the RFA tone:

12583#	programming mode
21# <your message> #	plays to end user at CB unit when HELP activated
22# <your message> #	plays to end user at CB unit AND called party when call is answered
*#	hang up and exit programming

COMMANDS DURING A CALL

The following commands can be used by the called party after the IA4100 places a call. These commands **cannot** be used in Programming Mode.

20	increase microphone gain
21	decrease microphone gain
22	speaker volume up
23	speaker volume down
24	microphone mute
25	speaker mute
01	play message #1
02	play message #2
11	turn on auxiliary output 1
13	turn on auxiliary output 3
14	turn off auxiliary output 1
16	turn off auxiliary output 3
31	extend call timer
33	terminate message playback

AUXILIARY OUTPUTS (default settings)

Auxiliary Output #1	closed until the end of the call
Auxiliary Output #3	closed for one second momentary contact closure

IA4100 DIAGRAM

